


# TRANSFER CASE OIL SEAL (for RH Side)

## COMPONENTS

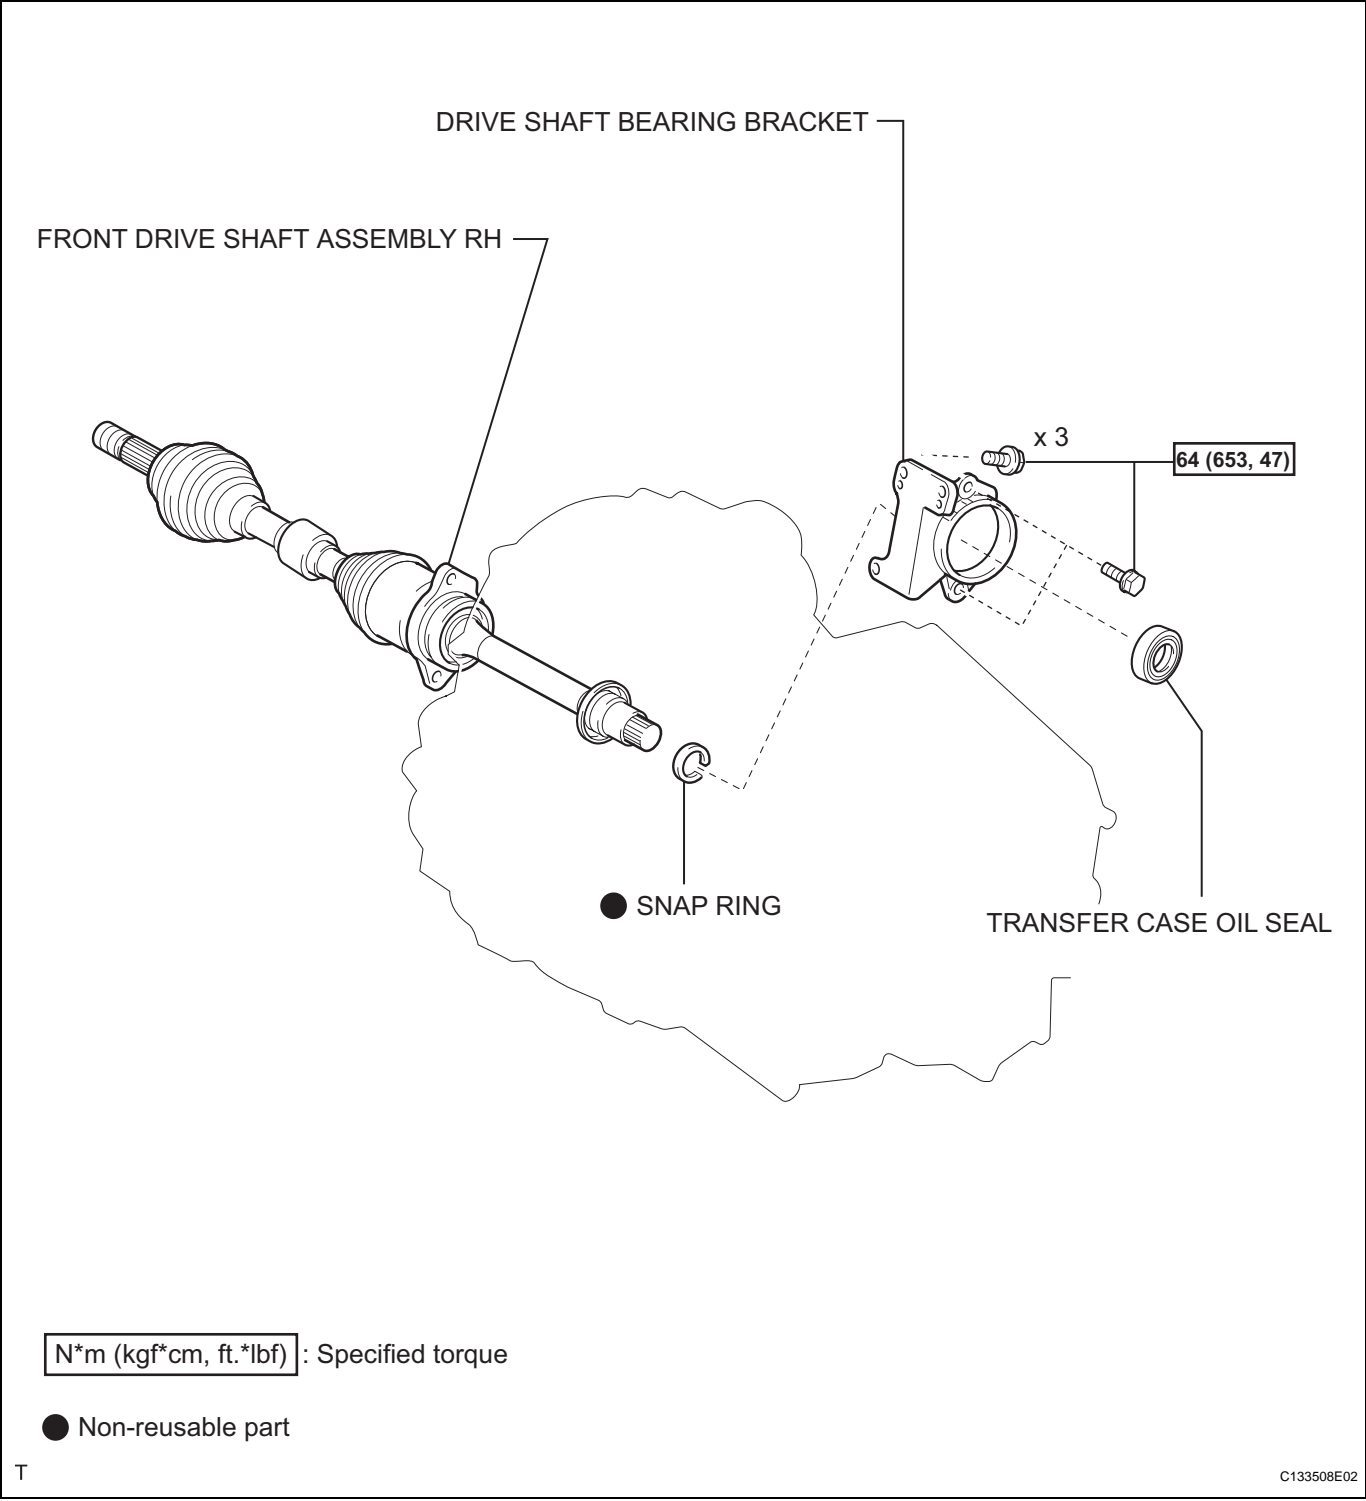

## REPLACEMENT

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

**NOTICE:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. DRAIN TRANSFER OIL

- (a) Remove the drain plug and gasket, and drain the oil.
- (b) Install a new gasket and the drain plug.

**Torque: 39 N\*m (398 kgf\*cm, 29 ft.\*lbf)**

3. REMOVE FRONT DRIVE SHAFT ASSEMBLY RH (See page [DS-41](#))



4. REMOVE DRIVE SHAFT BEARING BRACKET

- (a) Remove the 3 bolts and bracket from the transaxle.

5. REMOVE TRANSFER CASE OIL SEAL (for RH Side)

- (a) Using SST, tap out the oil seal from the transfer.

**SST 09308-00010**

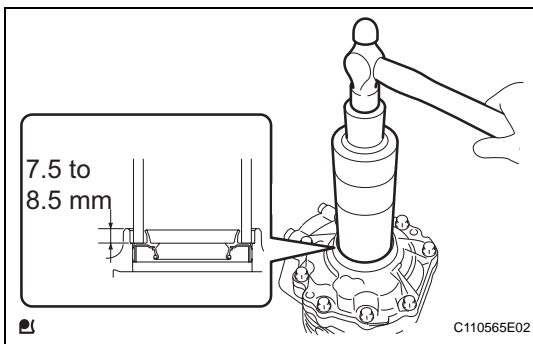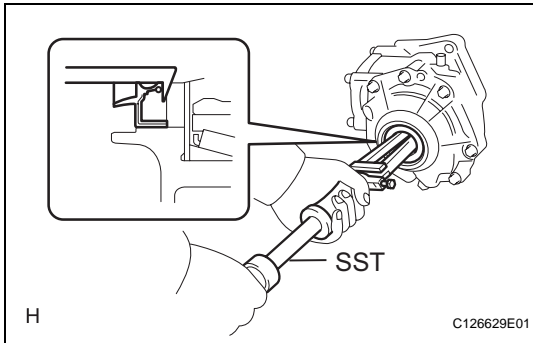

6. INSTALL TRANSFER CASE OIL SEAL (for RH Side)

- (a) Coat a new oil seal lip with MP grease.
- (b) Using SST and a hammer, tap in the oil seal.

**SST 09316-60011 (09316-00011)**

**Standard depth:**

**7.5 to 8.5 mm (0.30 to 0.33 in.)**

**NOTICE:**

**Do not damage the oil seal lip.**

7. INSTALL DRIVE SHAFT BEARING BRACKET

- (a) Install the bracket to the transaxle with the 3 bolt.

**Torque: 64 N\*m (653 kgf\*cm, 47 ft.\*lbf)**

8. INSTALL FRONT DRIVE SHAFT ASSEMBLY RH (See page [DS-65](#))

9. ADD TRANSFER OIL

10. INSPECT TRANSFER OIL (See page [TF-45](#))

11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL